




**Models**

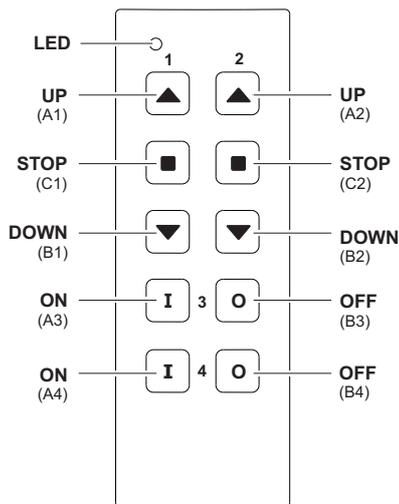

**RT34E5004-01**  
 2x UP/STOP/DOWN 3-button operation  
 2x ON/OFF 2-button operation

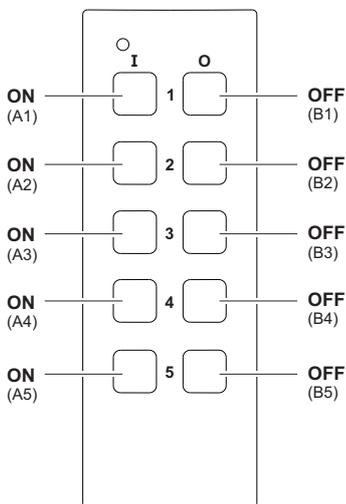

**RT34E5005-01**  
 5x ON/OFF 2-button operation

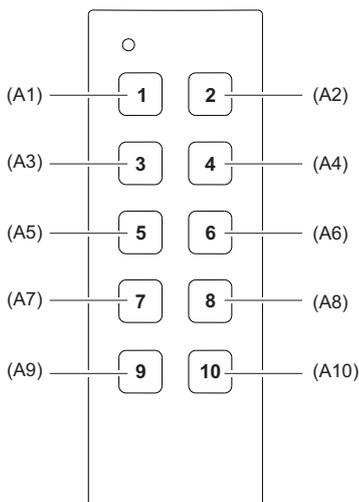

**RT34E5010-01**  
 10x ON/OFF 1-button operation

**Technical Data**

Frequency: 868.30 MHz  
 Radiated power: 0.23 mW  
 Modulation: FSK  
 Coding: Easywave  
 Power supply: 1x 3-V-Batterie, CR 2032  
 Indicator: LED  
 Operating temperature: -20°C to +60°C  
 Range: free-field: approx. 150 m  
 buildings: approx. 30 m  
 Dimensions: 38 x 109 x 14 mm  
 Weight: 37 g (incl. battery)

**Safety Advice**



Before using the transmitter, carefully read through the operating instruction!

Note also the operating instructions of the radio receiver.  
 Never operate doors or other items of equipment without keeping them under watch as you do so. Persons could be placed in danger!  
 Keep the Mini Transmitter away from children!

Check at regular intervals that the device is ready to transmit!  
 Have faulty transmitters checked by the manufacturer!  
 Do not make any unauthorized alterations or modifications to the Mini Transmitter!  
 Bewahren Sie die Batterien außerhalb der Reichweite von Kindern auf.

**Intended Use**

The transmitter RT34 may only be used to operate Easywave radio receivers.  
 The manufacturer shall not be liable for any damage caused by improper or non-intended use!

**Function**

The transmitter RT34 is available with the following operating possibilities:  
 - Combination 3-button / 2-button operation:  
 3-button operation: open, close and stop of two shutters/awnings;  
 2-button operation: turned on or off of two electric devices.  
 - 2-button operation: turned on or off of five electric devices.  
 - 1-button operation: turned on or off of ten electric devices by repeatedly pressing the button.

The transmitters has a battery check function. If the battery is weak, the LED flashes during transmission approx. 3 sec.

At the end of the transmission process, an undervoltage telegram is transmitted. This telegram can be evaluated by adapted Easywave receivers. For information, read the operating instructions for the relevant receiver.

**Using the Transmitter**

Transfer the transmission code of the button A to the radio receivers of the devices to be operated. For this read the operating instructions supplied with the radio receivers.  
 For sending press briefly the required button, the LED lights up.

**Note:** With the learning button PTx (see fig. 1) you can bring the receiver into the programming mode. Please read the operating instructions, if the receiver supports this feature.

**Troubleshooting**

- If the LED's light up too faintly: change the battery.
- If the LED's don't light up at all: check that the battery is correctly poled.
- If the device still doesn't react: go closer to the radio control or re-transmit the transmission code(s) to the radio receiver.

**Replacing the Battery**

1. Insert a small coin into the slot on the bottomside of the transmitter. Turn the coin diagonally and carefully press the two halves of the housing apart.
2. Replace the battery. Use only batteries of type CR2032.

**Make sure the polarity is correct!**

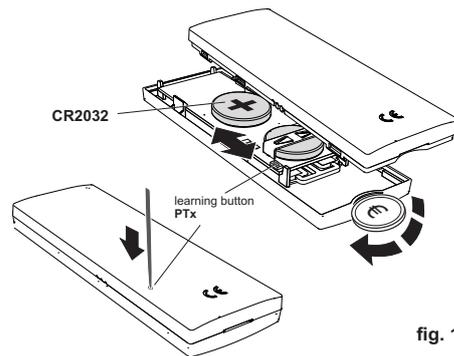


fig. 1

**Disposal**

**Waste electrical products and batteries should not be disposed of with household waste!**

Dispose of the waste product via a collection point for electronic scrap or via your specialist dealer.  
 Dispose of used batteries in a recycling bin for batteries or via the specialist trade.



Put the packaging material into a recycling bin for cardboard and paper.



**Warranty**

Within the statutory warranty period we undertake to rectify free of charge by repair or replacement any product defects arising from material or production faults.

Any unauthorized tampering with, or modifications to, the product shall render this warranty null and void.

**Conformity**



Hereby, ELDAT EaS GmbH declares that the radio equipment type RT34 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: [www.eldat.de](http://www.eldat.de)

**Customer Service**

If, despite correct handling, faults or malfunctions occur or if the product was damaged, please contact the company at the address below:

**ELDAT EaS GmbH**  
 Schmiedestraße 2  
 15745 Wildau  
 Germany  
 Phone: + 49 (0) 33 75 / 90 37-310  
 Fax: + 49 (0) 33 75 / 90 37-90  
 Internet: [www.eldat.de](http://www.eldat.de)  
 E-Mail: [info@eldat.de](mailto:info@eldat.de)

**Scope of Delivery**

Transmitter RT34 incl. battery, mounting plate, operating instruction